

VIII.SPECIFICATIONS

Switch Power Supply(SMPS)	100V~240V(50Hz/60Hz)
Power Consumption	Operation: 6.5W±0.5W Standby: 1.5W±0.5W
Chime Tones	Dingdong/ 8 Chord Melody Rings
Audio Communication System	Duplex Hand-Free
Automatically Shutdown Time	60 Seconds
Unlock Signal Output	12V/2A~100ms
Wiring	Cable between Monitor & Camera: <50m: 0.5mm ² >50m: 1.0mm ² Door Lock Wiring: 18AWG, 1.0mm ²
Video Format	ASF
Photo Format	JPG
Memory Storage	2 GB Maximum
Working Temperature	-10°C to +40°C

VIDEO-RECORDING HAND-FREE COLOR VIDEO DOOR PHONE



INSTRUCTION MANUAL

Designs Subject to Change Without Prior Notice.

SAFETY INSTRUCTION

- 1)DO NOT EXPOSE THIS DEVICE TO RAIN OR OTHER LIQUID;
- 2)POWER ON AFTER WIRING OF THE COMPLETE SYSTEM;
- 3)DO NOT DISMANTLE THE COVERS OR TRY TO SERVICE THE UNIT WITHOUT TECHNICAL PERSON;
- 4)KEEP THE USER MANUAL AND OTHER ACCESSORIES WELL;
- 5)FOLLOW THE INSTRUCTION OF OPERATION AND INSTALLING AFTERWARDS;
- 6)SOLDERING WELL OF THE JUNCTION END OF WIRES

Introduction of System

Welcome to use our DVR Video door phone, it will bring more security to your family.

The DVR product with latest CCTV technologies bears Recording function of videos or/and photos. We provide bulky memory to save all the video/photos and you can keep the videos/photos for long time, and download videos/photos to computer as one universal connector USB port is provided to help you do this.

We provide friendly user-guide menu to help you operate and set the door phone, videos/photos can be replayed, deleted, favorite ring melody can be changed and time and date can also can set.

Apart from the recording function, it also bears basic function of clear dual-way communication, unlock, alert, surveillance and night vision. Please read the user manual before installing and wiring. Do retain it for future reference. Hope our product satisfies you mostly.

Please check your kit with this manual we have option of Video/Photo Memory for this product.


Photo-Memory Only	<input type="checkbox"/> VDP-C37DP	<input type="checkbox"/> VDP-C33DP
Video-Recording Only	<input type="checkbox"/> VDP-C37DVR	<input type="checkbox"/> VDP-C33DVR
Photo/Video Both	<input type="checkbox"/> VDP-C37VP	<input type="checkbox"/> VDP-C33VP

Checklist of package


Monitor;	<input type="checkbox"/> 1PC
Outdoor Station;	<input type="checkbox"/> 1PC
Cable;	<input type="checkbox"/> 1PC(4-wire, usually 15 meters)
Mounting bracket;	<input type="checkbox"/> 1PC
Mounting screws ;	<input type="checkbox"/> 1PC
AC/DC Power Adaptor(N/A in Built-in Power supply Models)	<input type="checkbox"/> 1PC

I. FUNCTIONAL COMPONENTS


● INDOOR MONITOR VDP-C37DVR

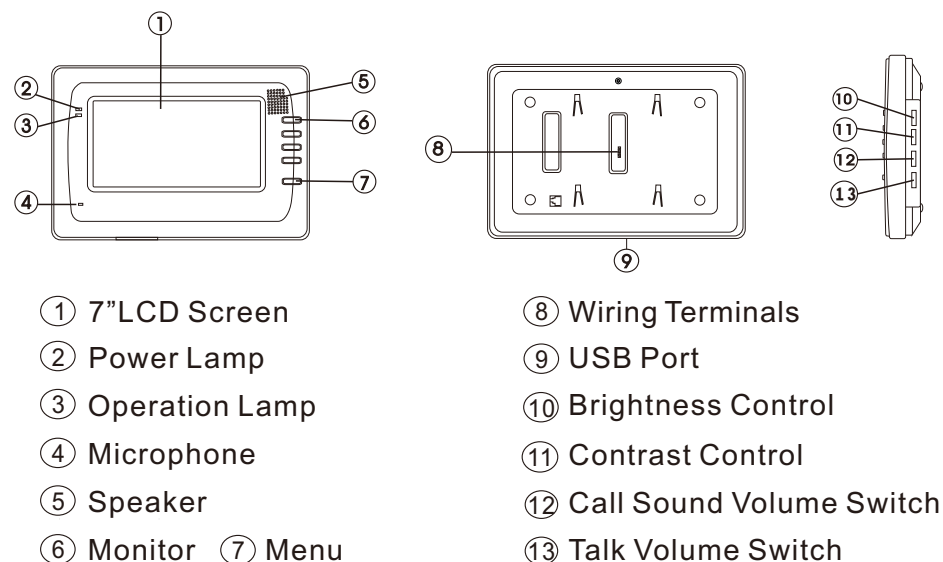

● INDOOR MONITOR VDP-C33DVR

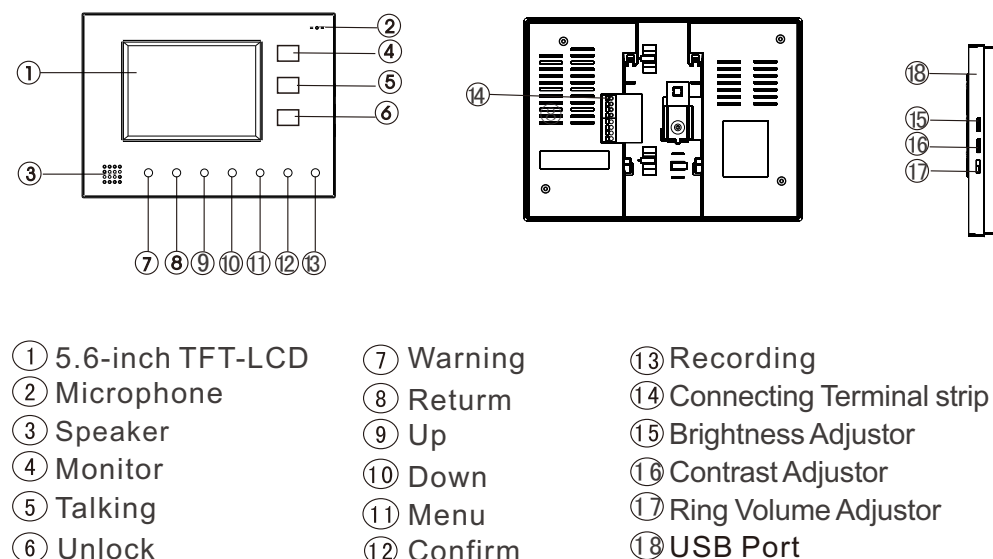


● OUTDOOR STATIONS

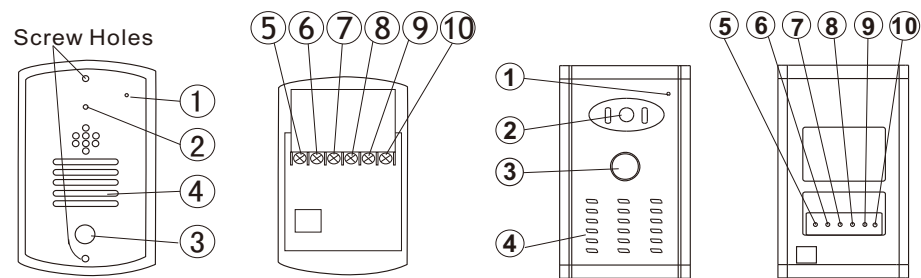

ODS-S □

ODS-5 □

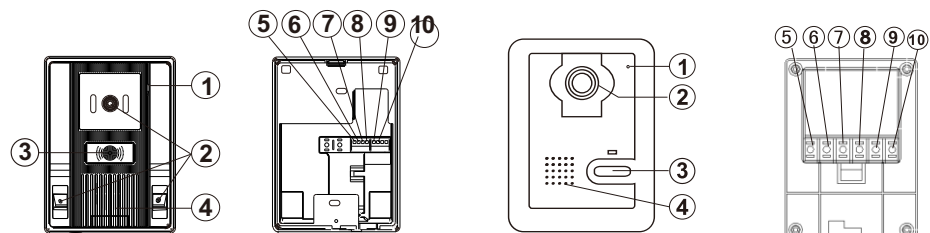


ODS-J □

ODS-A □

- ① Microphone
- ② Camera
- ③ Call
- ④ Speaker
- ⑤ Wiring Terminal to Monitor "V" (Video)
- ⑥ Wiring Terminal to Monitor "GND" (Power-)
- ⑦ Wiring Terminal to Monitor "A" (Audio)
- ⑧ Wiring Terminal to Monitor "+" (Power+)
- ⑨ Lock Connector "UNL+"
- ⑩ Lock Connector "UNL-"

II. Menu Checklist

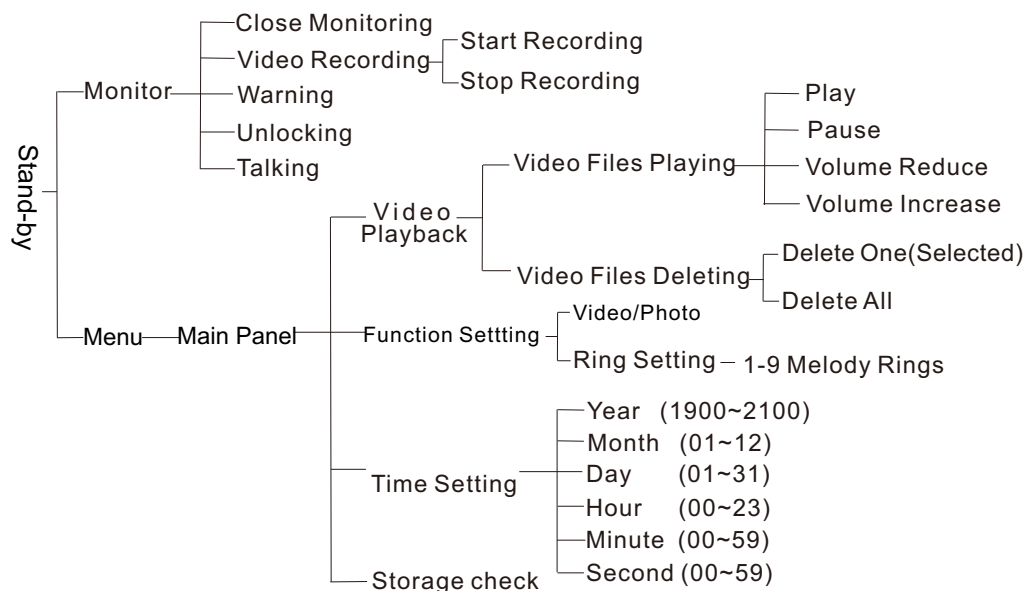


III. Operation Instruction of VDP-C37DVR Series

1. Warning, Unlocking & Talking

Press Call Button ➡➡





➡➡ Automatically Display

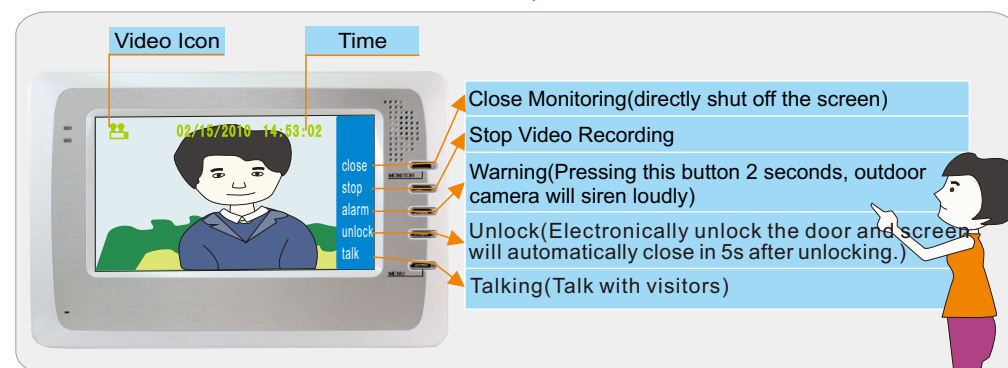


2. Monitoring

Press Monitor Button under standby mode ➡➡ if you want to monitor outside the door.

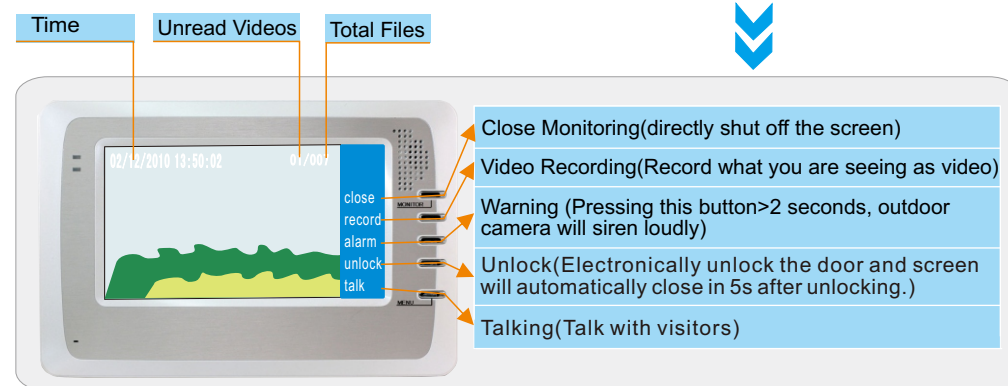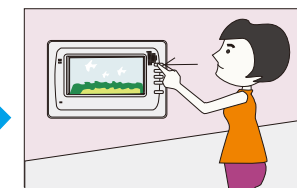



3. Video Recording

Press Record Button under monitoring or talking mode, video icon and record time will be showed on the screen. It lasts 60 seconds if no action operated on the door phone, you can also stop recording by pressing "stop" button

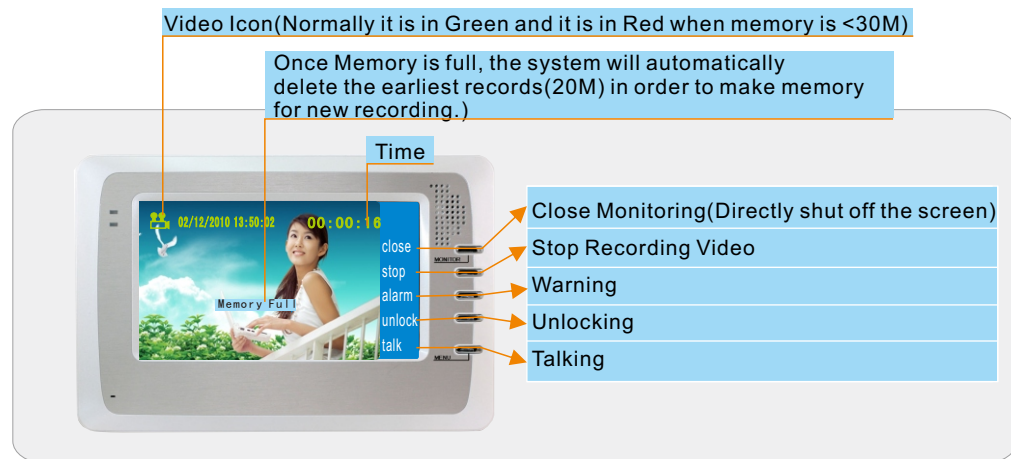


4. Menu Operating

Under standby mode, press "Menu" Button

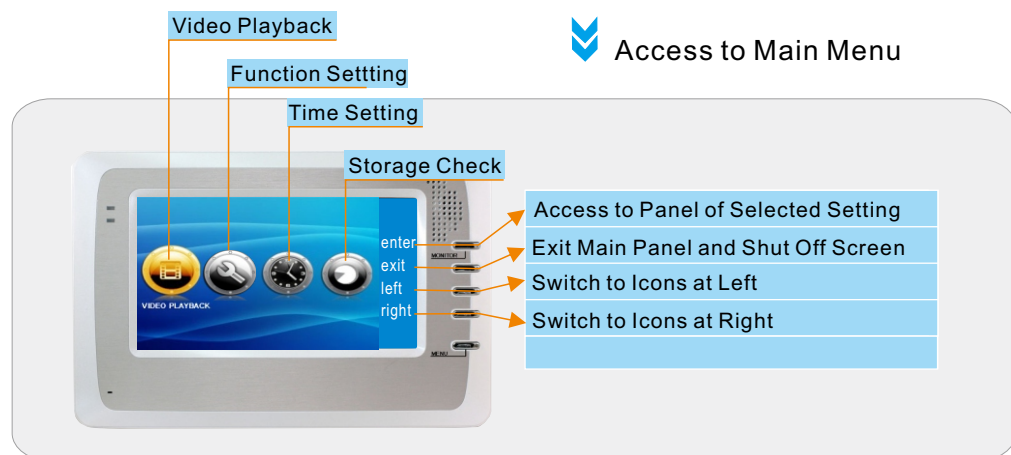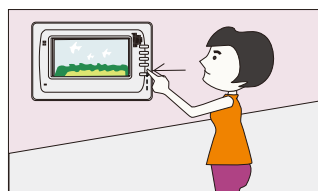


4.1.Video Playback

After accessing to the menu, a group(4/group) of thumbnail images of video files are showed on the screen.

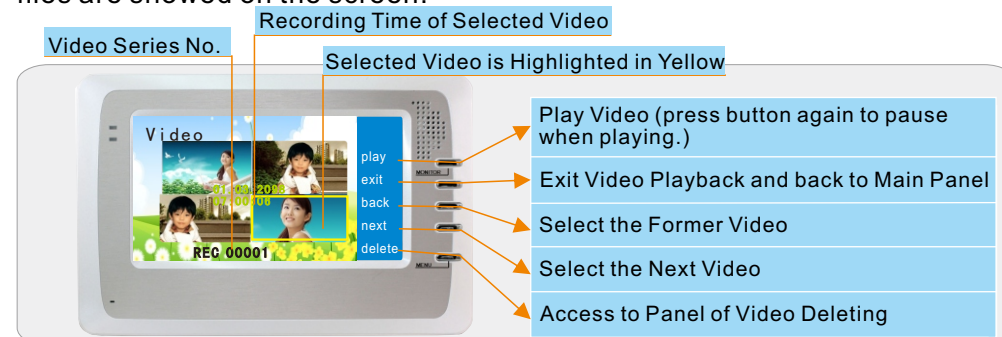


a. Videos Playing

After selecting the video you want to check, then press Play Button to play, it will continuously play the video in time sequence until you stop it by Stop Button or it will play all the videos. Press Exit Button to return to Thumbnail images.

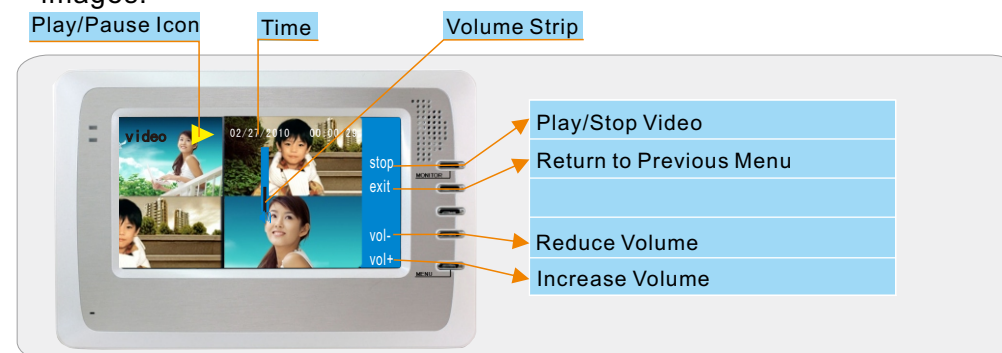


b.Videos Deleting

In the thumbnails list of videos, press Delete Button to delete the videos. There are 2 options: Delete One and Delete All.

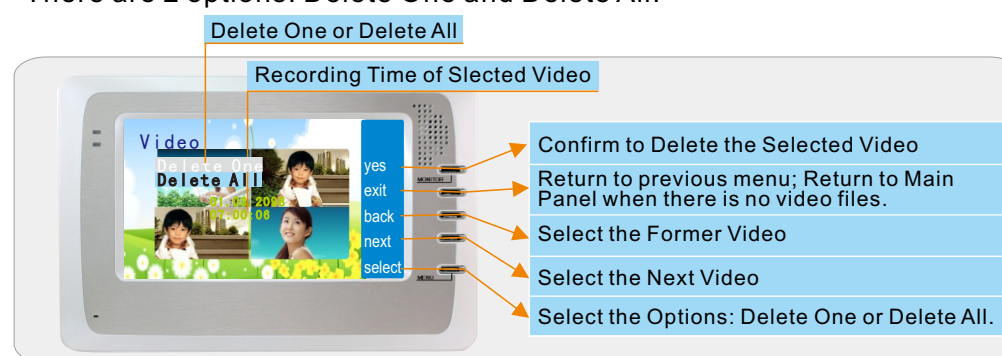


4.2. Function Setting

You can select ring chime tones and video/photo option here

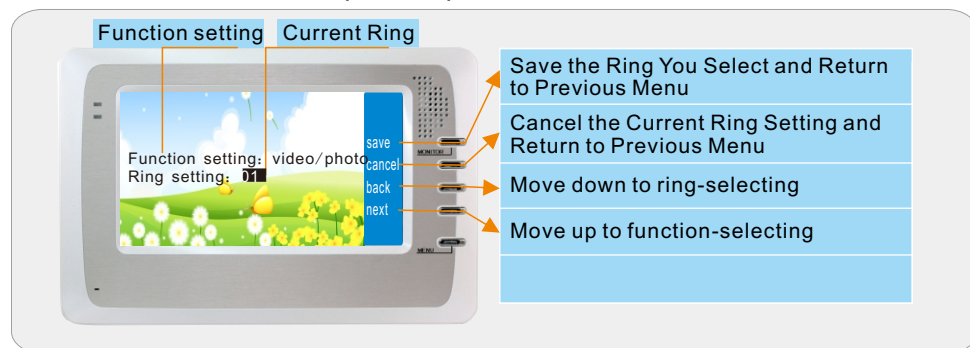


4.3. Time Setting

Accessing to Time Setting then press Select Button to set "year, month, date, hour, minute and second" accordingly.

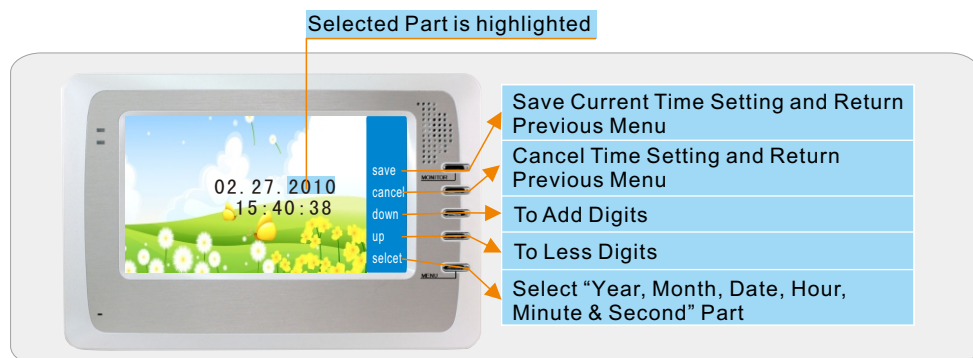


4.4. Storage Check

Accessing to Storage Check to check percentage of usage and total memory.

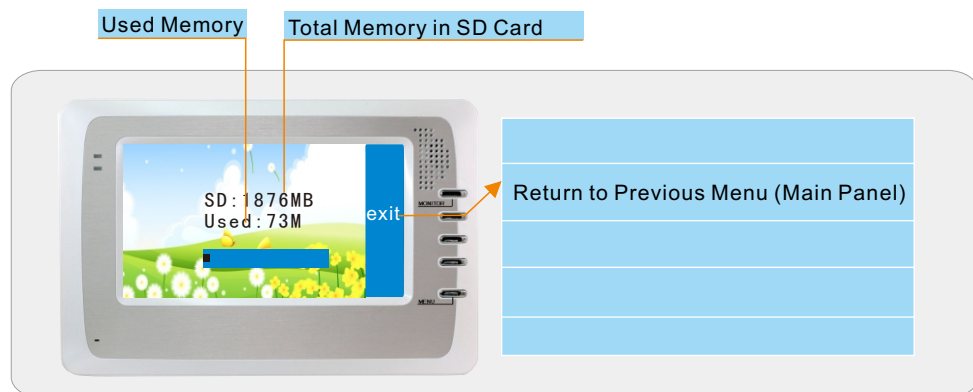


5. Computer Download

Connect the USB port with PC's with USB bridge cable to download the videos.

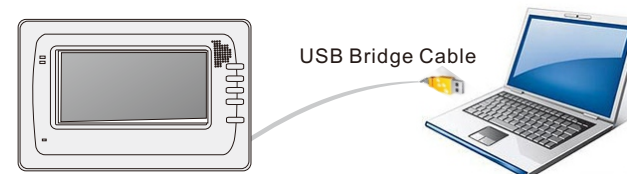

6. Outdoor Station

1. When a visitor presses Call Button, a confirming tone is heard which verifies the call is going.
2. The person inside presses "Talk" Button to answer the call and talk with the visitor through microphones.
3. The unit is built in infrared & white LEDs, you can see the visitors clearly even at deep night.

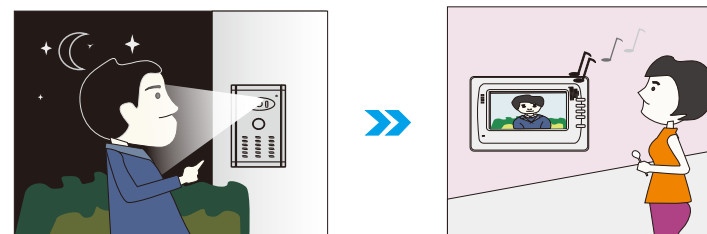

4. For ODS-J bearing 3 cameras at the door station gives you 3 view direction(up, down right, down left) of visions which is much helpful for you to identify visitors before opening your door.

IV. Operation Instruction of VDP-C33DVR Series


1. Warning, Unlocking & Talking

Press Call Button ➡➡





Tip :

Under basic function mode, "Return, Up, Next, Menu and Confirm" buttons don't work until return to Menu-setting mode.

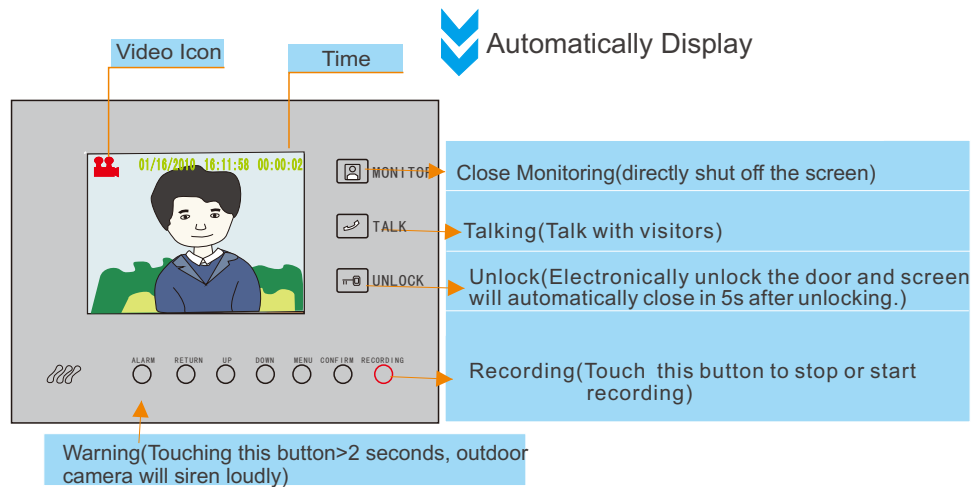


2. Monitoring

Touch Monitor Button under standby mode if you want to monitor outside the door. ➡➡

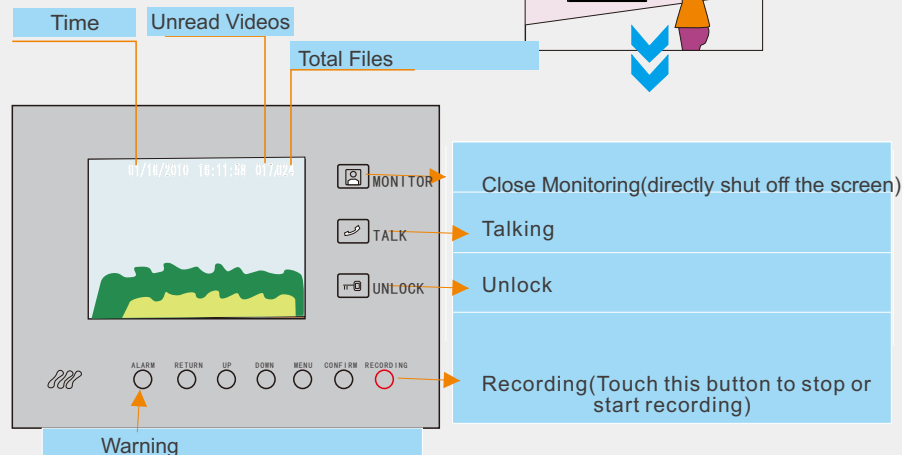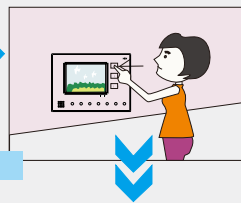



3. Video Recording

Touch "Recording" button to start recording (The recording button doesn't work under standby and Menu-setting modes.)

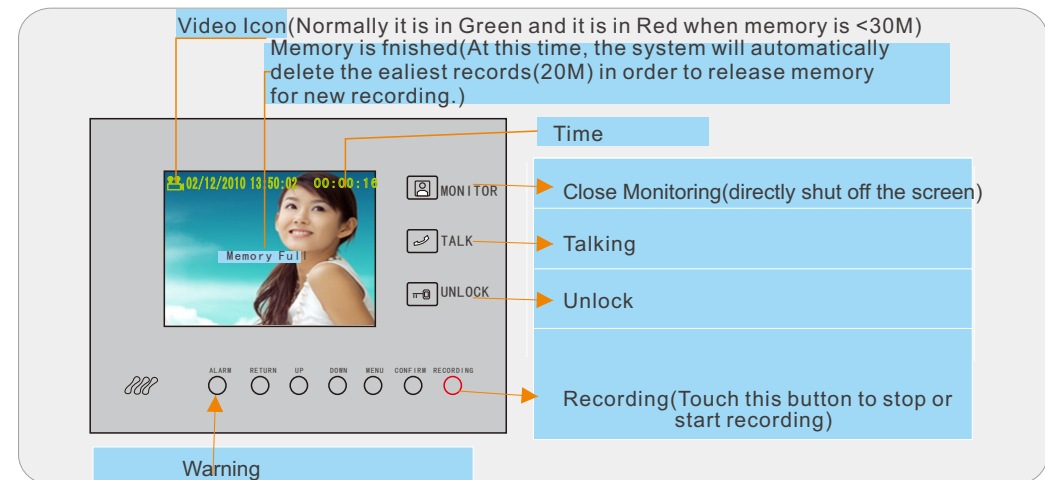


4. Menu Displaying

Under standby mode, Touch "Menu" Button ➡➡

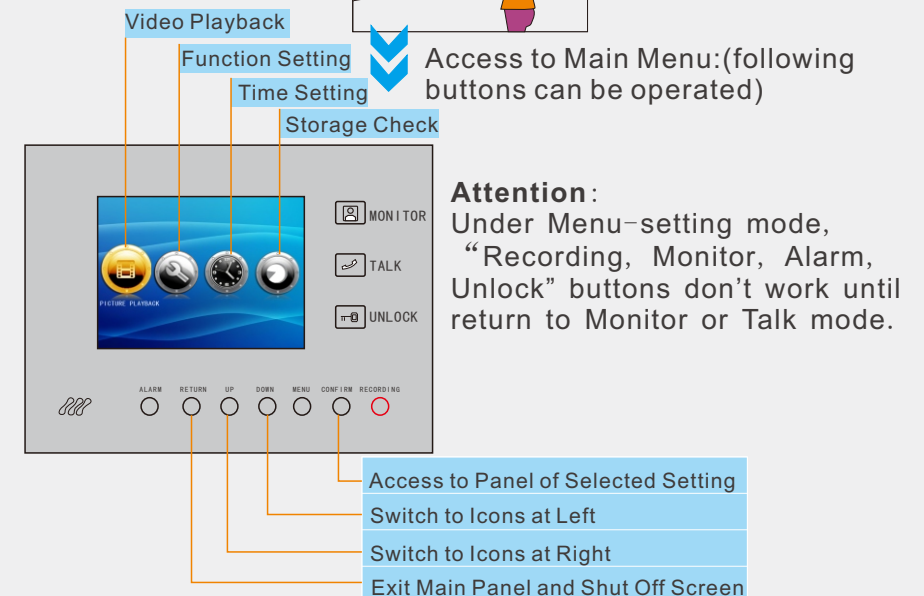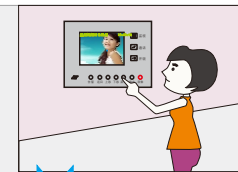


4.1 Video Playback

After accessing to the menu, a group(4/group) of thumbnail images of video files are showed on the screen.

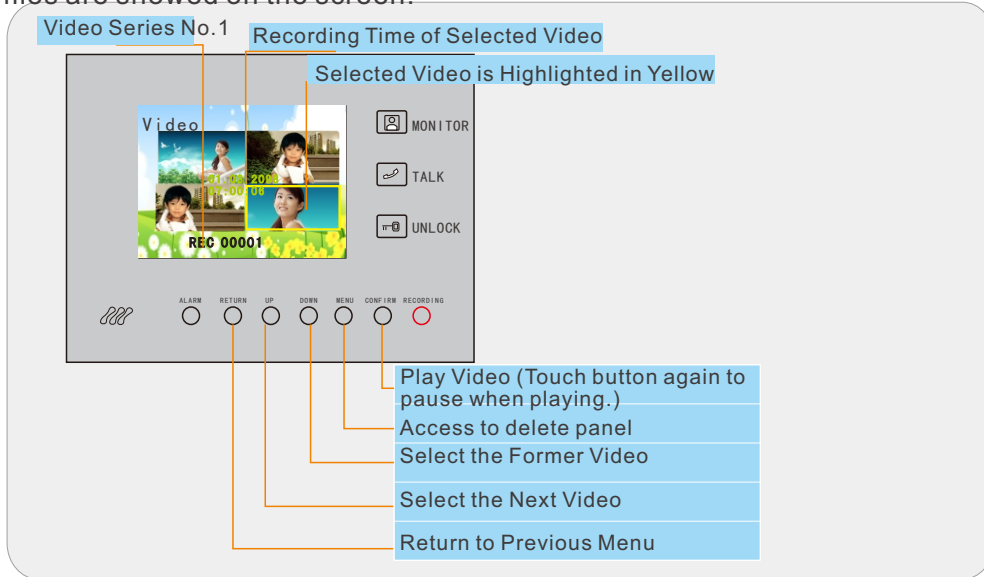


a.Videos Playing

After selecting the video you want to check, then touch Play Button to play, it will continuously play the video in time sequence until you stop it by Stop Button or it finishes playing off all the following videos. After playing, touch Exit Button to return to Thumbnail images.

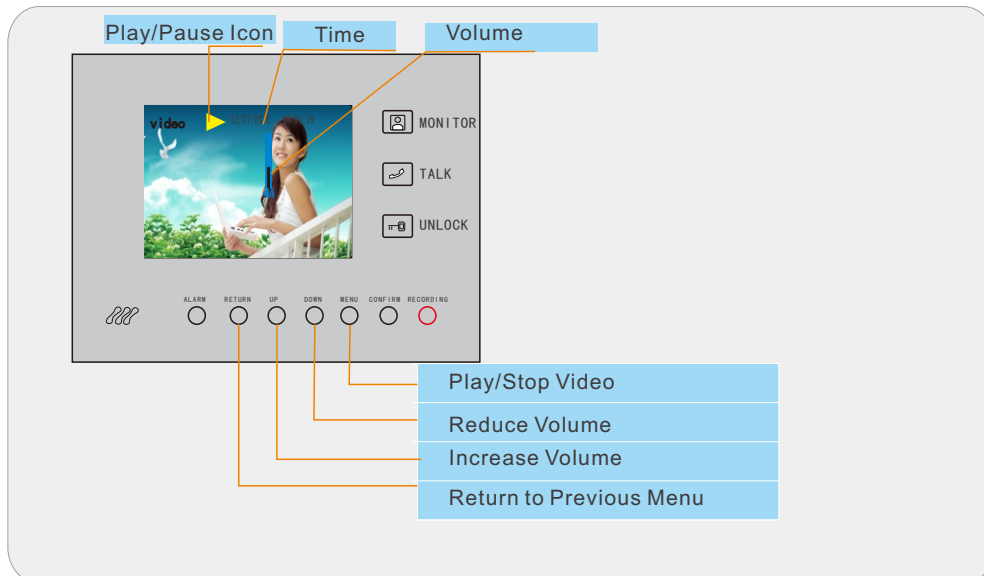


b.Videos Deleting

In the thumbnails list of videos, touch Delete Button to delete the videos. There are 2 options: Delete One and Delete All.

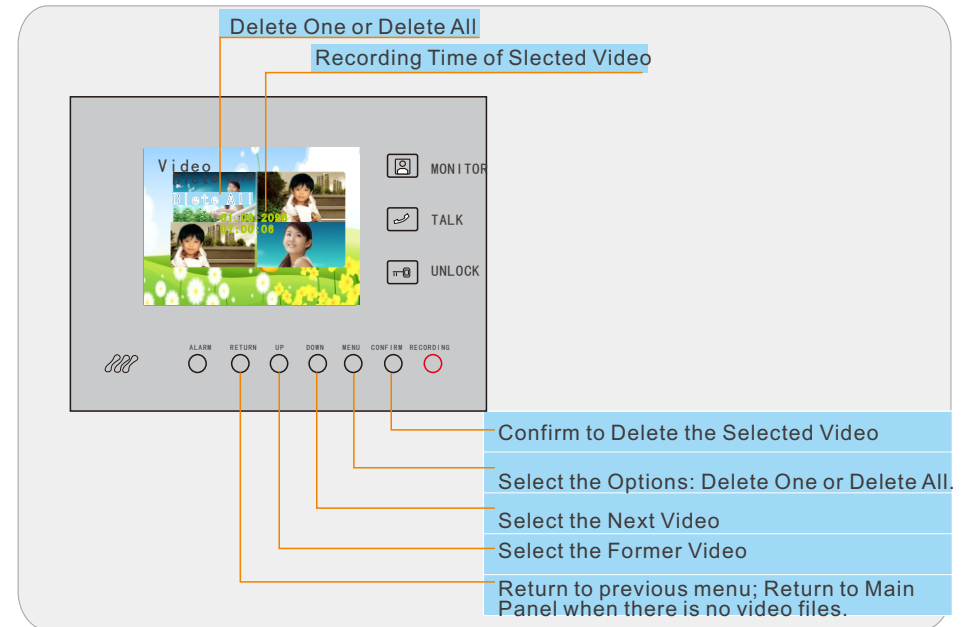


4.2 Function Setting

You can select ring chime tones and video/photo option here

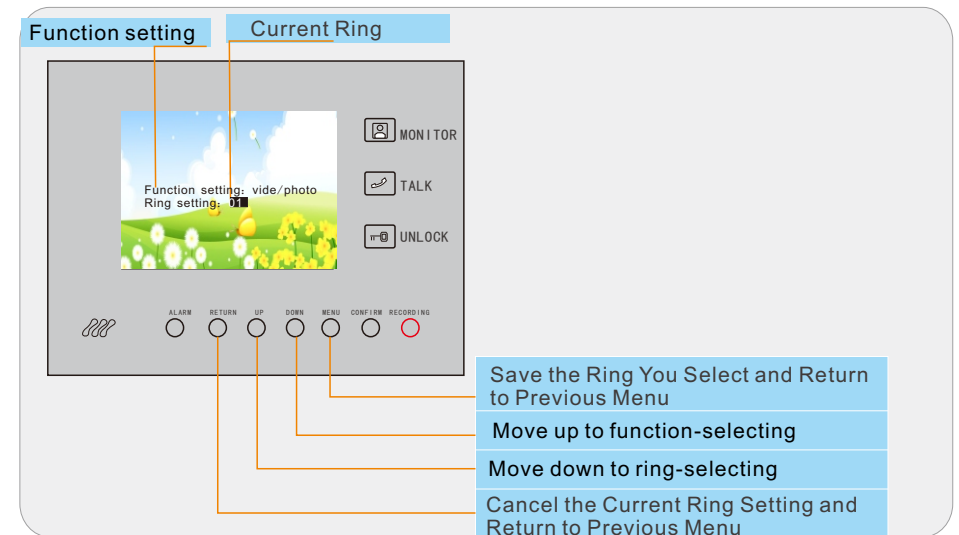


4.3 Time Setting

Accessing to Time Setting then touch Select Button to set "year, month, date, hour, minute and second" accordingly.

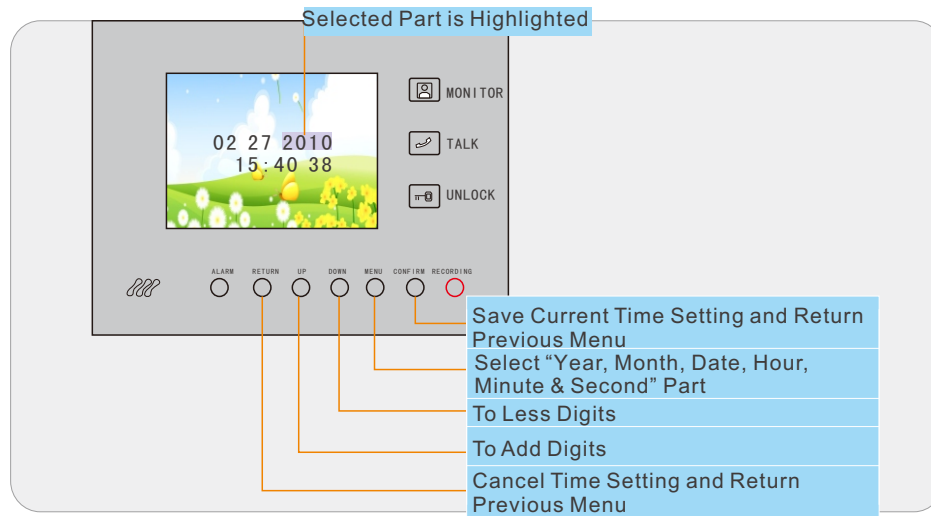


4.4 Storage Check

Accessing to Storage Check to check percentage of usage and total memory.

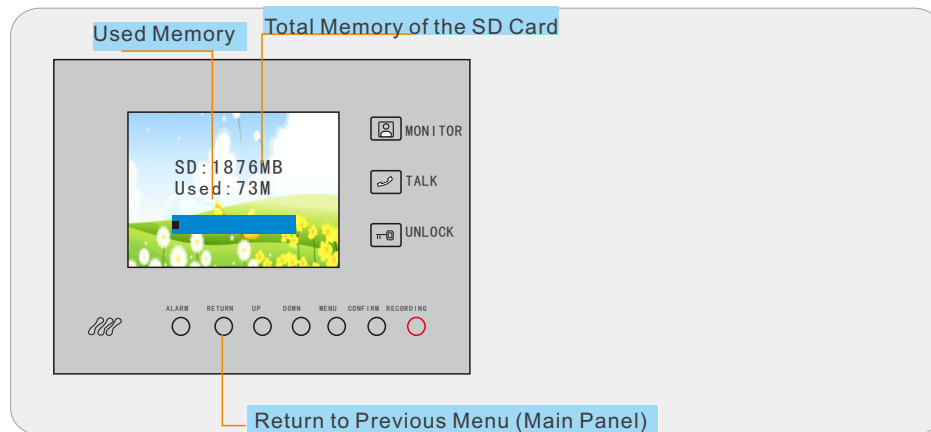


5. Computer Download

Connect the USB port with PC's with USB bridge cable to download the videos.

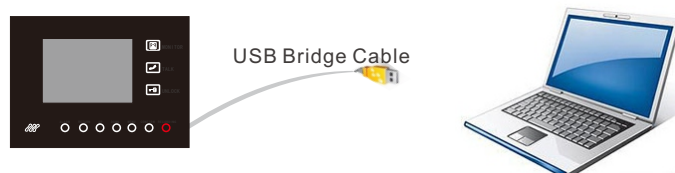


Outdoor Station

1. When a visitor presses Call Button, a confirming tone is heard which verifies the call is going.
2. The person inside presses Talk Button to answer the call and talk with the visitor through microphones.
3. The unit is built in infrared & white LEDs, you can see the visitors clearly even at deep night.

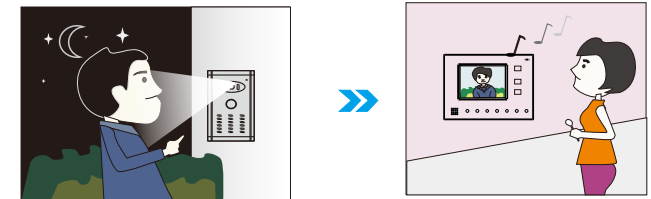


V. Wiring

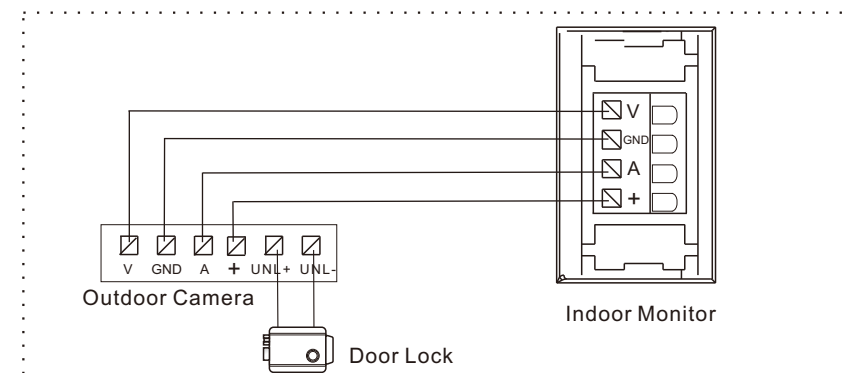


VI. Installing of Indoor Monitor

- 1) Select a mounting location to an AC outlet but the monitor cannot be exposed to dirt, direct sunlight(or other strong light), direct moisture conditions. After determining the location, attach mounting bracket securely to the wall.
- 2) Drill a hole in the center area of the bracket just big enough for the electrical wiring to pull through, and drill small holes for plug bolts.
- 3) Insert and fix the plug bolts in the small holes, then attach the mounting bracket to the wall and fix with self-tapping screws.
- 4) Connect well the wires from Wiring Terminal and pull through the central hole which connect to the Outdoor Station.
- 5) Attach the wired monitor unit to the bracket by setting the monitor over the four bracket hooks and sliding it down.

VDP-C37DVR Series

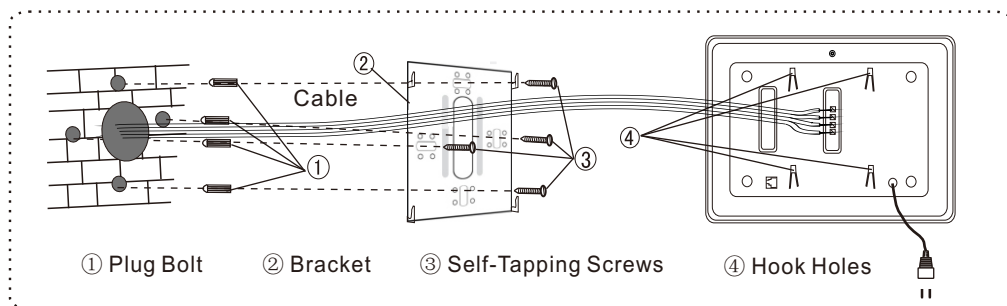


VDP-C33DVR Series

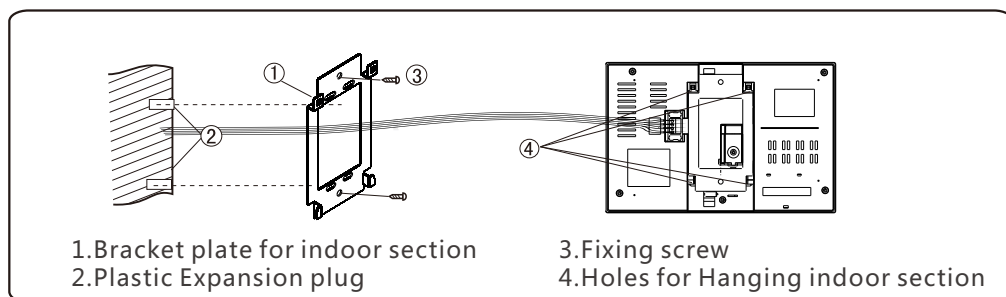

VII. Installing of Outdoor Station


The monitor is compatible with several camera units (ODS-J/ODS-S/ODS-5 ODS-A are optional.). Please verify the model no. before installation and follow correct directions. The recommended location of camera unit is at the height 150~170cm from central part of Camera to the floor (for reference only).

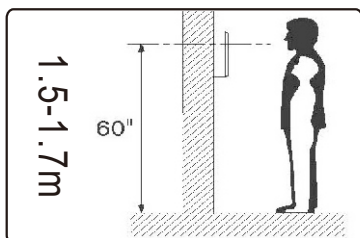

Notes: Do not expose the camera unit to direct sunlight and be sure it is shield from storm rain. The background of visitors may be affected by street lamp and other strong light, you can mount some lamps to highlight for clearer images of visitors.


1) ODS-S

- ① Dig a square hole which is the same size of the Flush Box in the wall and drill a hole in the center for wiring and 2 small holes for plug bolts.
- ② Fix the plug bolts in the 2 small holes and put the Flush Box into the wall and fix with 2 self-tapping screws.
- ③ Pull the wiring which connect to Monitor Unit through the central hole and connect well with Terminals "V, GND, A & +". Also prepare 2 wires to connect with Lock Connectors "UNL+ & UNL-" and pull through Flush Box and central hole in the wall and connect with the door lock.
- ④ Put the wired Camera Unit in the Flush Box and fix with 2 Hex Socket Cap Screws.

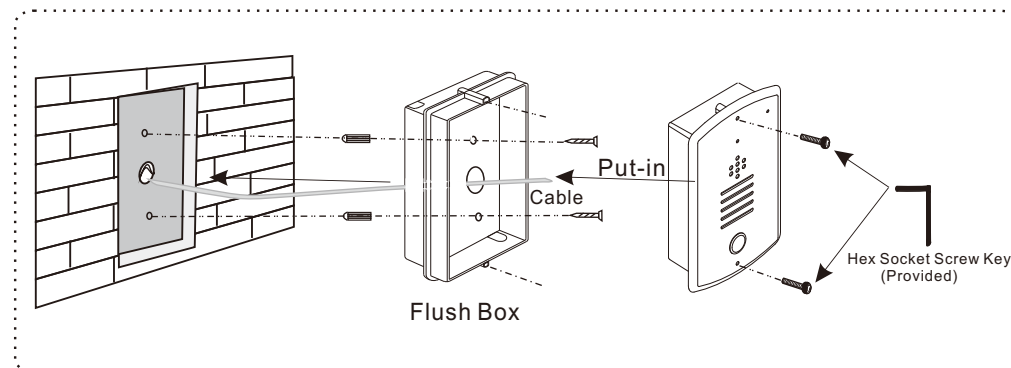

2) ODS-5

- ① Dig a square hole which is the same size of the Flush Box in the wall and drill a hole in the center for wiring and 4 small holes for plug bolts.
- ② Fix the plug bolts in the 4 small holes and put the Flush Box into the wall and fix with 4 self-tapping screws.
- ③ Pull the wiring which connect to Monitor Unit through the central hole and connect well with Terminals "V, GND, A & +". Also prepare 2 wires to connect with Lock Connectors "UNL+ & UNL-" and pull through Flush Box and central hole in the wall and connect with the door lock.
- ④ Put the wired Camera Unit in the Flush Box and fix with 4 drive screws.

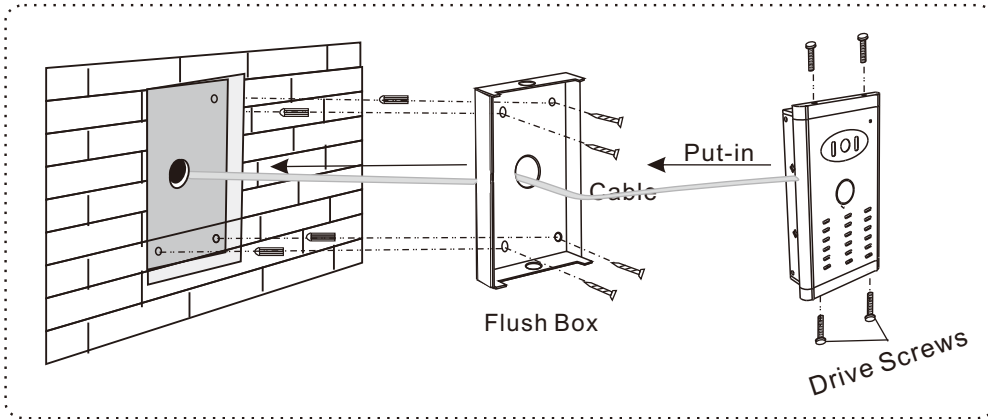

3) ODS-A


(1)Frame part : Surface-mount the frame part

Make holes for the screw by wall plastic expansion plug and fasten the screws according to the hole of the frame part.

(2)The recommended height of 150CM helps the camera for proper monitoring range. First , put the clasp in the frame with four screws, then secure the frame into the wall.

(3)Connect the wires from the camera unit to the monitor wiring terminal.

(4)In the end install the outdoor section in the frame as depicted on the figure below. Tighten up screw from the bottom.

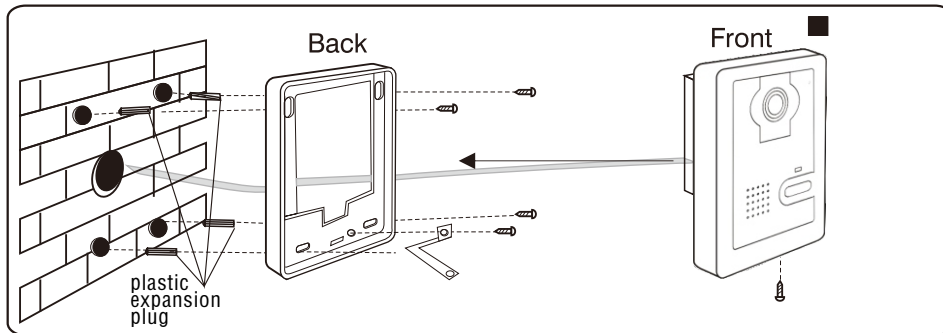


4) ODS-J

① Drill a hole in the center area of the bracket just big enough for the electrical wiring to pull through. And drill 2 small holes for the plug bolts.

② Insert and fix the plug bolts in the 2 small holes, then attach the mounting bracket to the wall and fix with 2 self-tapping screws.

③ Pull the wiring which connect to Monitor Unit through the central hole and connect well with Terminals “V, GND, A & +”. Also prepare 2 wires to connect with Lock Connectors “UNL+ & UNL-” and pull through Bracket and central hole in the wall and connect with the door lock.

④ Put the wired Camera Unit in the bracket and pop out the tab at the bottom of the unit. Fix it with drive screw and press back the tab.

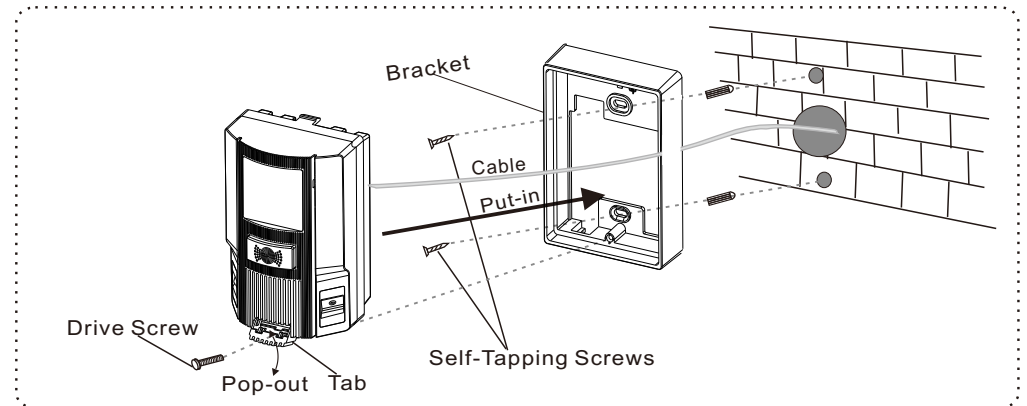

Attention:

It is suggested that owners delete photos kept regularly for photo-memory only model with SD built-in to hold thousands of photos for better performance.

The handled objects are photos when the function setting is photo and it is video when the function setting is video for photo/video both recording model.

The system should be power off each time to refresh after downloading files by the USB port for all the video door phone models with memory function.